



---

# Ultra-thin HD LCD Lifter



**TS-F185T**

**Before using this system, please read this manual carefully**

## Notification



### WARNING

To ensure the reliability of the equipment and the safety of personnel, please observe the following when installing, using and maintaining:

- If any of the following conditions are found, please immediately turn off the power, plug out and quickly contact your nearest dealer. Do not continue using this unit, which may cause a fire or electric shock.
  - If you find smoke or have a strange taste from the machine.
  - If water or metal falls into the machine.
  - If the unit is dropped or the case is damaged.
  - If the wire is damaged (wire core exposure, broken wire, etc.).
- If the machine contains high-pressure parts, in order to avoid the fire or electric shock, absolutely don't open the case, if any questions please inform your nearest dealer.
- Do not place cups, bowls, vases or metal and other water-filled substances on the unit. Serious spilled liquid may cause a fire or electric shock.
- Never expose the unit to rain and any moisture or water, which may cause electric shock or fire.
- Do not place metal objects or flammable materials from the vents on the machine cover, nor place coins, which may cause fire or electric shock.
- Do not place heavy objects on the unit to avoid personal injury or property damage when the unit is slipping.
- Make sure that the volume is turned on at the beginning of the boot, and the high volume of the boot may cause hearing problems.
- Make sure that the volume is turned on at the beginning of the boot, and the high volume of the boot may cause hearing problems.
- For long-term accumulation of dust to be cleaned, please inform your dealer to regularly clean the machine, so as to avoid damage to the machine or cause a fire.
- The battery must be replaced with the same type of product and the correct installation should be made in order to avoid electrical damage and explosion hazard.
- The product is a Class I device. The device must be well connected to ground. The power plug must be connected to a power outlet with a grounding device to ensure that the equipment is fully grounded.

- This product uses a power plug or appliance input socket as a disconnecting device with the power supply, and must be disconnected if necessary for safety reasons.



- This equipment is only suitable for safe use at altitudes under 2000 meters.

## Precautions

### 1. The installation environment

When installing the unit, in order to ensure the normal cooling of the host, should avoid the poor ventilation of the place or high temperature environment, to avoid direct sunlight.

Recommend to install cabinet or other well-ventilated place indoor. If you use the machine in the outdoors, please pay attention to waterproof, moisture, lightning protection measures.

Avoid installing in a violent place of vibration; do not place other equipment on the machine.

Working temperature : -10°C~ 60°C.

Humidity is limited to 5% to 90% (non-condensing).

### 2. To avoid electric shock and fire

Do not touch the hands and the source with wet hands

Do not spill liquid on the machine, so as to avoid short-circuit or fire inside the machine.

Do not place other equipment directly on the top of the unit.

Non-professional service personnel Do not disassemble the unit yourself to avoid damage and electric shock.

### 3. Transport and handling

The packaging of the machine is designed and tested to ensure that the host will not be accidentally damaged during transport. It is best to use the original packaging when handling the unit.

Do not move the host device between the place or cold or over hot to avoid condensation inside the machine, affecting equipment life.

### 4. Please follow the warning instructions on this product, the warning signs on behalf of:

	Applicable to 2000 meters above sea level and below safe use
	Safe use only in non-tropical climates

## 5. Agreement

Please strictly follow the instructions in this manual. The software, hardware and appearance of this product will be upgraded and updated continually. The above changes will be made without notice.

Non-professional maintenance personnel, do not remove the product, to avoid damage and electric shock.

# CONTENTS

<b>1 INTRODUCTION.....</b>	<b>6</b>
<b>2 FUNCTION &amp; FEATURES.....</b>	<b>7</b>
<b>3 PRODUCT MODEL &amp; SPECIFICATION.....</b>	<b>8</b>
<b>4 PACKING LIST.....</b>	<b>8</b>
<b>5 PRODUCT APPEARANCE &amp; STRUCTURE INSTRUCTION.....</b>	<b>9</b>
5.1 FRONT PANEL' FUNCTION & INTRODUCTION.....	9
5.2 REAR PANEL' S FUNCTION INTRODUCTION.....	10
<b>6 CENTRAL CONTROL PROTOCOL CODE LEARNING.....</b>	<b>11</b>
<b>7 MACHINE WIRING DIAGRAM.....</b>	<b>12</b>
<b>8 INSTALLATION SIZE (PRODUCT SIZE CHART).....</b>	<b>13</b>
<b>9 INSTALLATION SIZE (CONFERENCE TABLE OPENING SIZE CHART).....</b>	<b>14</b>
<b>10 COMMON FAULTS AND MAINTENANCE.....</b>	<b>15</b>

## **1 Introduction**

Multimedia Delegate Microphone for the conference table computer' display, the new product is more practical for paperless conference equipment, which regards the LCD touch display terminal as the center and is integrated high-definition video and unified communications, intelligent multi-screen interactive sharing , Intelligent conference control, audio and video capture and sound reinforcement system, to form a "people-oriented" intelligent conference experience. You can control it through the panel button, IR remote, RS232 command and RS485 command.

When using, you only need to simply press the up button on the panel, the elevator hidden the conference table will raise the screen from the chassis to the desk and angled (angle can be adjusted to the appropriate angle by pressing the manual button). When the display is not used, you can press the drop button to automatically drop the display and microphone hidden with the inside of the meeting table, and automatically turn off the valve and the desktop to keep flat. And the LCD screen will automatically disconnect the power, to achieve the efficient meeting, the beautiful desk, saving space. It is very convenient to use, and it is with anti-theft, dust, landscaping and other functions.

## 2 Function & Features

1. The microphone lift has an automatic straightening function. When the straw is bent, the machine is closed to automatically support the straw and will not damage the straw.
- 2, the display and microphone lift have a separate lifting system, both can be used according to the needs of lifting.
3. The equipment adopts all-aluminum structure, high-quality aluminum material and CNC engraving processing. The display frame is one-piece CNC forming of the whole aluminum alloy. The thin part is not more than 4 mm. The chassis is made of aluminum alloy, making the whole equipment exquisite, light and beautiful. ,atmosphere.
- 4, the surface treatment of the equipment is anodized, bright color, can be sandblasted, wire drawing and other processes, can also be customized in a variety of colors.
5. The thickness of the product panel is only 3mm and the width is only 70mm. Compared with the traditional lifter, it is lighter and takes up less space. The weight of the product is only one-third of the weight of the conventional lifter, which reduces the transportation cost and the pressure on the Huiyi table is small.
6. The transmission structure is specially treated, the noise is reduced to a minimum, and the internal structure is treated by waterproofing. The general meeting tea leakage will not affect the use of the machine.
7. High-definition screen for domestic well-known brands, the choice of A gauge display screen, high resolution, colorful and transparent. Resolution: 1920\*1080P aspect ratio 16: 9.
8. The product with imported steel wire and high-precision guide rail and linear bearing, AC reducer motor to drive power; Central Control Association.
9. After the rise, the screen automatically supplies power, after the decline, the screen automatically power off, saving environmental protection.
10. Support HDMI and VGA two-way signal input. When there is only one signal input, the screen will automatically recognize the signal. When two signals are input at the same time, it can be manually switched through the panel button. When there is no signal input, the screen automatically enters the power saving. mode.
11. This device can be centrally controlled by the central control software, which can be controlled by remote control or host. One button can make all the devices in the room rise or fall.

### 3 Product Model & Specification

Product Model	TS-F185T
Product Dimension	510×70×650
Chassis Dimension	495×60×647
Desktop Opening	497×62
Panel Sink	511×71×3
Lifting Time	30S
Elevation angle	0-30°
Video Port	HDMI/VGA
Screen Resolution	1920*1080
Working Voltage	220V 50/60HZ
Contrast	700: 1
W*H*L	16: 9
Brightness	350cd/m <sup>2</sup>
Power Consumption	25W

### 4 Packing List

NO.	Appendix	Notes
1	Lifter	1
2	Power cable	1
3	Touch data line	1
4	User's manual	1
5	Data USB cable	1
6	Serial cable	1

It is strictly packed before leaving the factory. Before use, please confirm whether the products and appendix ordered are damaged, deformed or missing. If it is damaged, inconsistent or missing, please contact the product supplier.


## 5 Product Appearance & Structure Instruction

### 5.1 Front Panel' Function & Introduction



NO.	Name	Description
1	Computer Host Power Button	Control computer host's power key function
2	USB Port	Reading data
3	Up Button	Control the screen's up function(The angle can be adjusted from 0-30 degree)
4	Pause Button	Pause the up or down key of the screen
5	Down Button	Control the screen's down function(The angle can be adjusted from 0-30 degree)
6	Signal Switching Button	If there are two signals by VGA & HDMI, they can be switched
7	Menu Button	When the screen has a signal display, you need to adjust the screen parameters by the menu section

## 5.2 Rear Panel's Function Introduction

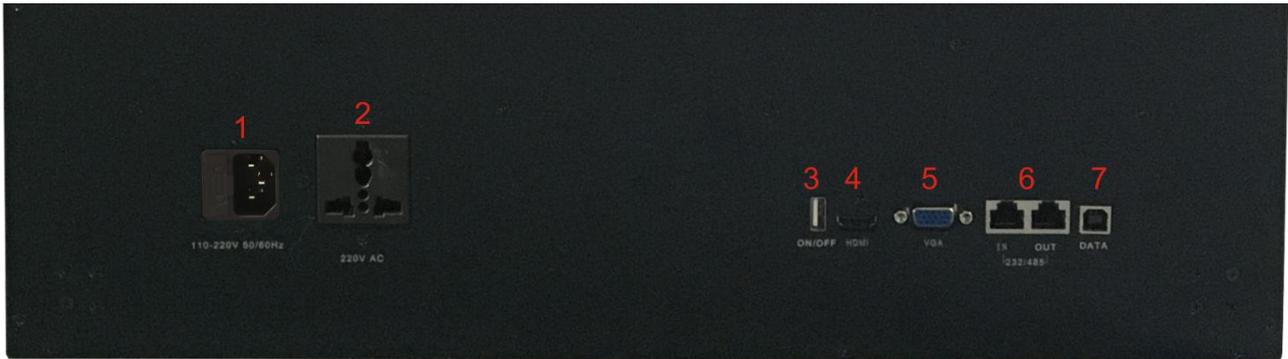


S/N	Name	Description
1	Power input interface	Use for power input interface
2	Power output interface	Use for power output interface
3	Power USB Port	The USB port can be connected with computer host USB port
4	HDMI Port	HDMI Video signal input port
5	VGA Port	VGA Video signal input port
6	Central Control 232 Network port	Used for Central Control 232 Control System Network Port
7	Central Control 485 Network port	Used for Central Control 485 Control System Network port
8	Data port	Used for touch screen data transmission port

1. Rear Panel' card is only for reference;
2. Product picture is only for reference, and please see the real product.

## 6 Central Control Protocol Code learning

1. With 232 and 485 protocol control, the bottom of the device is configured with two RJ45 network sockets, which can allow multiple devices to use ordinary cable connecting hand in hand;

The cable and the equipment protocol are connected as follows:

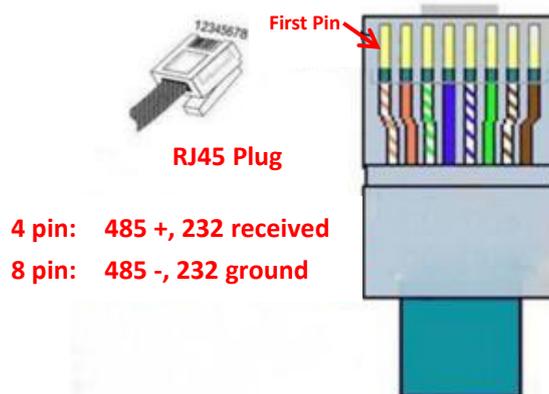

Baud Rate 2400

Parity N

Stop bit 1

Rising Code: FF EE EE EE DD


Decline Code: FF EE EE EE EE

Stop Code: FF EE EE EE CC

2. The above default code is the original factory code. You can control all the equipment. If need for group control, you have to set the code for the group settings. The steps are as follows:
  - ① Firstly connect the computer and machine through the serial device, open the serial debugging software, and confirm the computer serial port transmitter and receiver connected with the device. You can control the equipment through the default code to ensure that all connections are with no problem.
  - ② In the serial debugging software code input field to write the learning code, to learn the first group, write code: FF 10 11 01 AA; To learn the second group, write code: FF 10 11 02 AA; To learn the third group, write code: FF 10 11 03 AA ..... and so on.
  - ③ After writing the code, do not operate. Go back to the device which needs learning and press the "pause" key on the device panel without moving. Keep pressing it for 3-5 seconds, then the machine has a slight change.
  - ④ Release the "pause" button, click on the serial port debugging software code to send the button, send step written in the learning code which can be continuous for 2-3 times.
  - ⑤ After completion, the first set of control codes becomes: FF 10 11 01 DD(rise), FF 10 11 01 EE


(drop), FF 10 11 01 CC (pause), the second set of control codes becomes: FF 10 11 02 DD (rise), FF 10 11 02 EE (drop), FF 10 11 02 CC (pause), ••••• and so on.

## 7 Machine wiring diagram

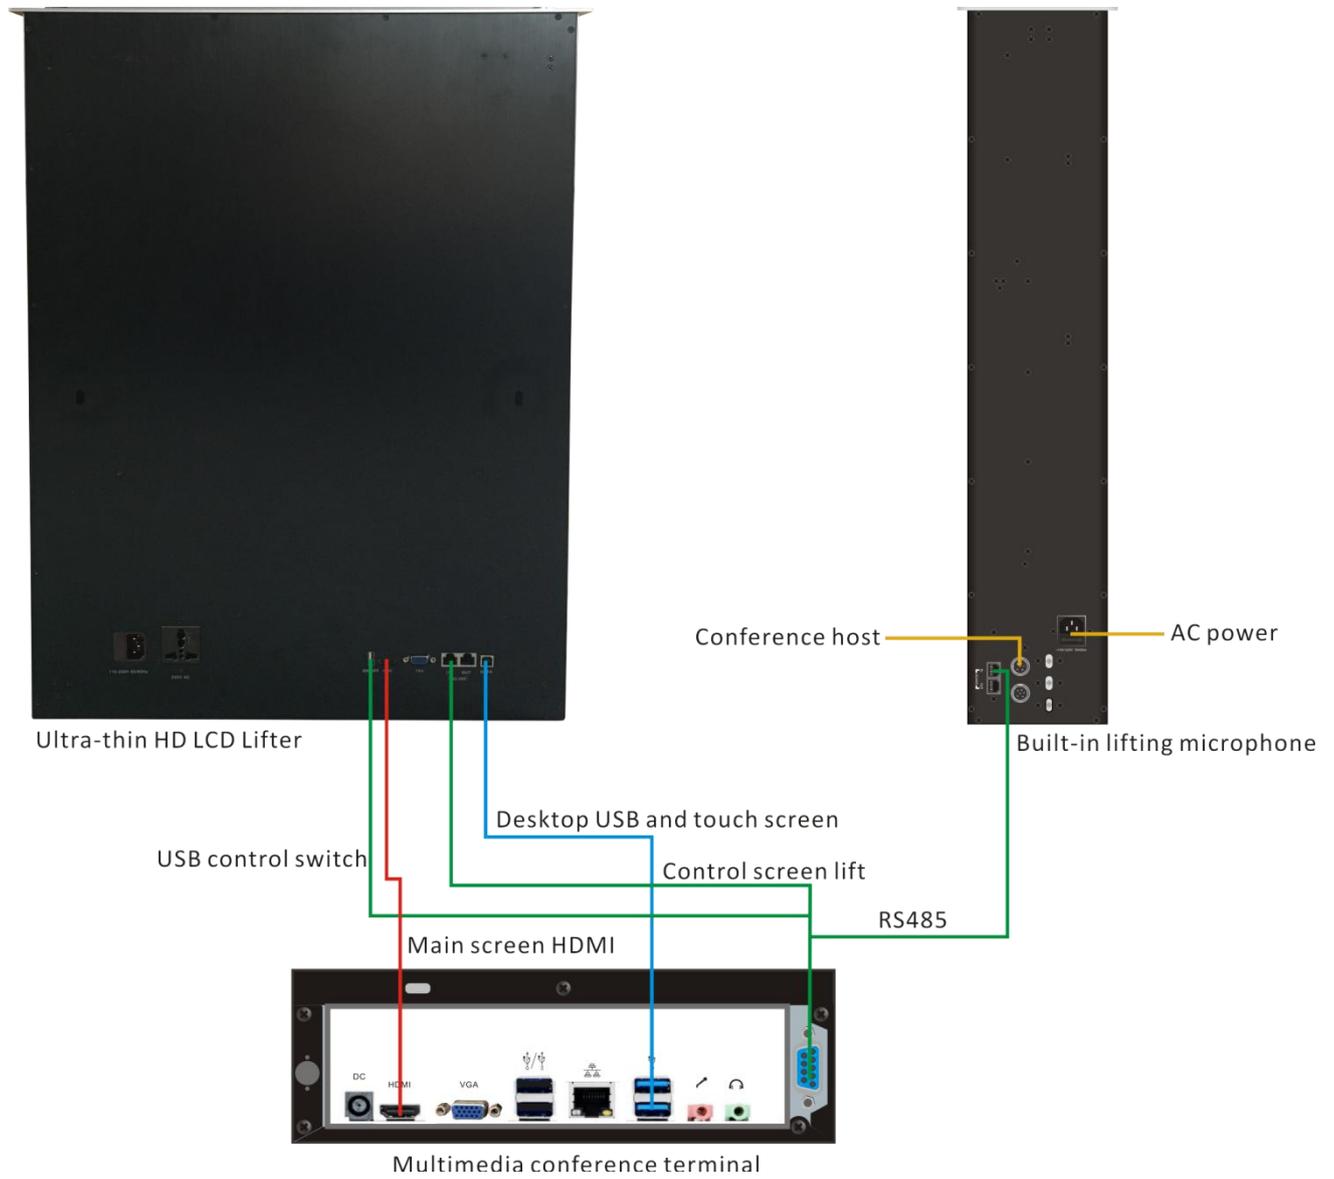

## 8 Installation size (product size chart)


TS-F185T Panel side view:

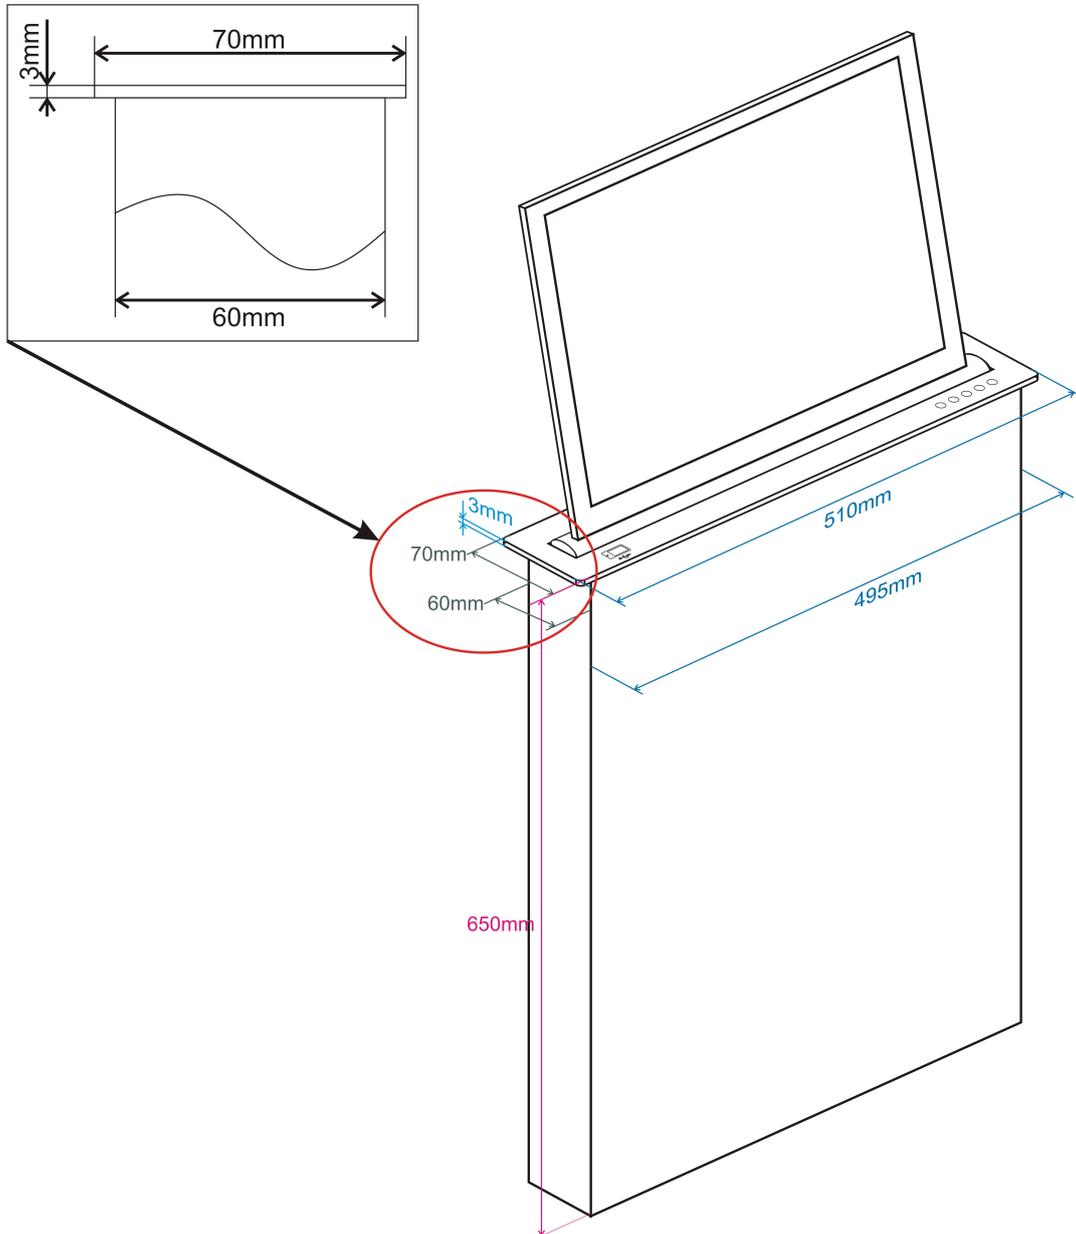

**Note:** Before installation, please remove the two 'transport fixing screws' on the cover, and the side display fixing clips and clean the foam filling inside the flip door.

## 9 Installation size (conference table opening size chart)

Take TS-F185T as an example:

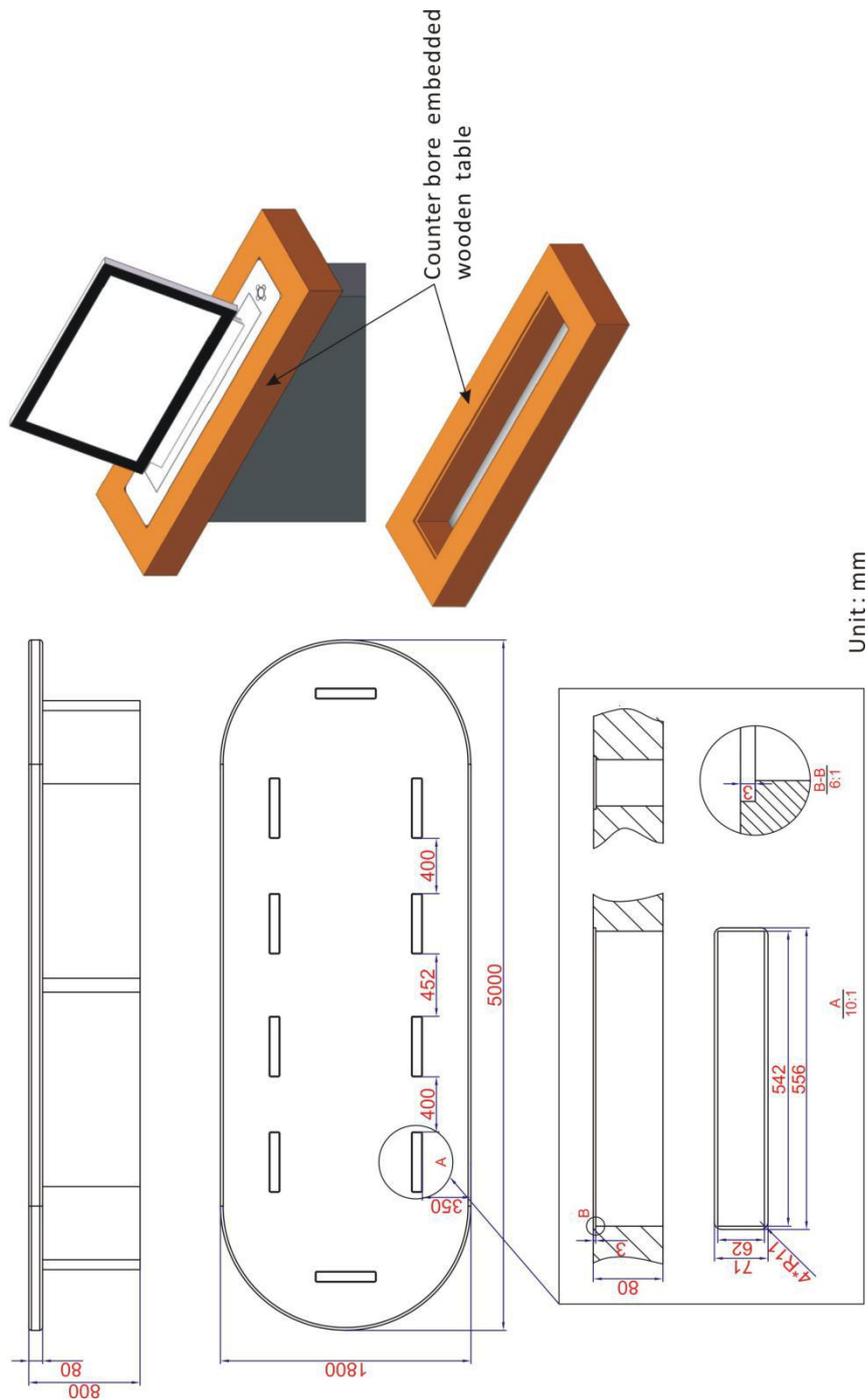

Taking a 5m × 1.8m × 0.8m conference table as an example, the distance between the elevators is 0.4m, and it is appropriate to have a distance of 0.35m from the edge of the conference table. The user can adjust the size according to the actual needs. For the installation hole of the elevator, please mark the opening according to the drawing.

## 10 Common faults and maintenance

Troubleshooting situation	Cause Analysis	Solution
The operation button does not respond, the screen and the microphone does not rise.	Not connected to the power supply.	Check the power and make sure it is on.
	Poor power input.	Check the power connector and make sure it is in good contact. Switch to another power input.
No corresponding image output when the signal is switched	Signal source or terminal display is not turned on.	Check and make sure the source and terminal display are on.
	Poor contact of video signal port.	Check and make sure the corresponding video signal port is connected properly.
After the signal is switched, the display shows a black screen	Display does not support source resolution.	Switch to a new source or set to automatically adapt to display resolution.
Output image is disturbed	Poor contact between input and output devices.	Connect the device properly and make it in good contact.
	Input and output connection wires are not qualified or damaged.	Replace regular standard wire.
	The wires are too long.	Replace high-quality wire with a length that supports the transmission range of the system.
Panel touch has obvious static electricity	The device is not well grounded.	Ground the grounding terminal of the unit well.
Unable to control the unit or remote terminal by serial command	Poor contact of the control port.	Check the communication serial port to make sure it is in good contact.
	The communication protocol is not well-set.	Set the local or remote communication protocol as needed.
The network port cannot control the machine	The control device network segment is inconsistent with the local matrix host network segment.	Change the control device network segment to be consistent with the matrix host
	The matrix host network segment is inconsistent with the connected LAN segment.	Change the matrix host network segment to be consistent with the LAN segment.

Not working	Internal damage to the main unit.	Send professional repair center for maintenance.
-------------	-----------------------------------	--

# Ultra-thin HD LCD Lifter

