



---

# **Fully Digital Conference System**

## **User Manual**

**TS-0310/0310A**

**Before using this system, please read this manual carefully**

## Notification



### WARNING

To ensure the reliability of the equipment and the safety of personnel, please observe the following when installing, using and maintaining:

- If any of the following conditions are found, please immediately turn off the power, plug out and quickly contact your nearest dealer. Do not continue using this unit, which may cause a fire or electric shock.
  - If you find smoke or have a strange taste from the machine.
  - If water or metal falls into the machine.
  - If the unit is dropped or the case is damaged.
  - If the wire is damaged (wire core exposure, broken wire, etc.).
- If the machine contains high-pressure parts, in order to avoid the fire or electric shock, absolutely don't open the case, if any questions please inform your nearest dealer.
- Do not place cups, bowls, vases or metal and other water-filled substances on the unit. Serious spilled liquid may cause a fire or electric shock.
- Never expose the unit to rain and any moisture or water, which may cause electric shock or fire.
- Do not place metal objects or flammable materials from the vents on the machine cover, nor place coins, which may cause fire or electric shock.
- Do not place heavy objects on the unit to avoid personal injury or property damage when the unit is slipping.
- Make sure that the volume is turned on at the beginning of the boot, and the high volume of the boot may cause hearing problems.
- Make sure that the volume is turned on at the beginning of the boot, and the high volume of the boot may cause hearing problems.
- For long-term accumulation of dust to be cleaned, please inform your dealer to regularly clean the machine, so as to avoid damage to the machine or cause a fire.
- The battery must be replaced with the same type of product and the correct installation should be made in order to avoid electrical damage and explosion hazard.
- The product is a Class III device. The device must be well connected to ground. The power plug must be connected to a power outlet with a grounding device to ensure that the equipment is fully grounded.

- This product uses a power plug or appliance input socket as a disconnecting device with the power supply, and must be disconnected if necessary for safety reasons.



- This equipment is only suitable for safe use at altitudes under 2000 meters.

## Precautions

### 1. The installation environment

When installing the unit, in order to ensure the normal cooling of the host, should avoid the poor ventilation of the place or high temperature environment, to avoid direct sunlight.

Recommend to install cabinet or other well-ventilated place indoor. If you use the machine in the outdoors, please pay attention to waterproof, moisture, lightning protection measures.

Avoid installing in a violent place of vibration; do not place other equipment on the machine.

### 2. To avoid electric shock and fire

Do not touch the hands and the source with wet hands

Do not spill liquid on the machine, so as to avoid short-circuit or fire inside the machine.

Do not place other equipment directly on the top of the unit.

Non-professional service personnel Do not disassemble the unit yourself to avoid damage and electric shock.

### 3. Transport and handling

The packaging of the machine is designed and tested to ensure that the host will not be accidentally damaged during transport. It is best to use the original packaging when handling the unit.

Do not move the host device between the place or cold or over hot to avoid condensation inside the machine, affecting equipment life.

### 4. Please follow the warning instructions on this product, the warning signs on behalf of:

|  |  |
|--|--|
|  | Applicable to 2000 meters above sea level and below safe use |
|  | Safe use only in non-tropical climates                       |

### 5. Agreement

Please strictly follow the instructions in this manual. The software, hardware and appearance of this product will be upgraded and updated continually. The above changes will be made without notice.

Non-professional maintenance personnel, do not remove the product, to avoid damage and electric shock.

# Content

|   |               |
|---|---------------|
| <b>1. Product Introduction.....</b>   | <b>- 5 -</b>  |
| <b>2. Product Description.....</b>  | <b>- 5 -</b>  |
| 2.1 FEATURES.....   | - 5 -         |
| 2.2 PRODUCT INTERFACE INTRODUCTION.....   | - 7 -         |
| 2.3 SPECIFICATION.....  | - 8 -         |
| <b>3. Connection Diagram.....</b>   | <b>- 9 -</b>  |
| <b>4. TS-0310/TS-0310A Operating Instruction.....</b>   | <b>- 10 -</b> |
| 4.1 STARTUP.....  | - 10 -        |
| 4.2 MICROPHONE UNIT TYPE.....   | - 10 -        |
| 4.3 CONFERENCE MANAGEMENT.....  | - 10 -        |
| 4.4 SIGN IN.....  | - 10 -        |
| 4.5 VOTE.....   | - 10 -        |
| 4.6 FIRE ALARM.....   | - 10 -        |
| 4.7 TIMED SPEECH AND SPEECH TIMEKEEPING.....  | - 11 -        |
| 4.8 AUDIO SETTING AND HEADPHONE OUTPUT.....   | - 11 -        |
| 4.9 LANGUAGE SETTING.....   | - 11 -        |
| 4.10 SYSTEM SETTING.....  | - 11 -        |
| 4.11 REQUEST FOR SERVICE.....   | - 11 -        |
| 4.12 SHORT MESSAGE AND ELECTRONIC NAMEPLATE.....  | - 11 -        |
| 4.13 CONFERENCE PC SOFTWARE RELATED FUNCTION.....   | - 12 -        |
| 4.14 UNIT ID AND RELATED IP ADDRESS.....  | - 12 -        |
| 4.15 ICMP PROTOCOL AND PING PACKETS.....  | - 12 -        |
| 4.16 UNIT WEB PAGE LOGIN.....   | - 12 -        |
| 4.17 UNIT ID NUMBER SETTING ON WEB.....   | - 13 -        |
| 4.18 VOICE CONTROL SETTING ON WEB.....  | - 13 -        |
| 4.19 LANGUAGE SWITCH SETTING ON WEB.....  | - 14 -        |
| 4.20 SIGN-IN SETTING ON WEB.....  | - 14 -        |
| 4.21 UNIT AUDIO PARAMETERS SETTING ON WEB.....  | - 14 -        |
| 4.22 UNIT BASIC INFORMATION VIEWING ON WEB.....   | - 15 -        |
| <b>5. TS-0310/TS-0310A Display Operating Instruction.....</b>                                 | <b>- 16 -</b> |
| 5.1 STARTUP.....  | - 16 -        |
| 5.2 AFTER THE STARTUP IS COMPLETED, ENTER THE HOMEPAGE, AND THE INTERFACE IS AS FOLLOWS:..... | - 16 -        |
| 5.3 MICROPHONE MANAGEMENT.....  | - 16 -        |
| 5.4 MENU INTERFACE.....   | - 17 -        |

|  |               |
|--|---------------|
| 5.5 SERVICE INTERFACE.....                         | - 18 -        |
| 5.6 SYSTEM SETTINGS.....                           | - 18 -        |
| 5.7 AUDIO SETTINGS.....                            | - 19 -        |
| 5.8 INITIATE VOTING.....                           | - 19 -        |
| 5.9 INITIATE SIGN-IN.....                          | - 21 -        |
| 5.10 LANGUAGE SETTINGS.....                        | - 22 -        |
| 5.11 REGULAR VOTING INITIATED BY THE PC.....       | - 22 -        |
| 5.12 FIVE-KEY RANKING INITIATED BY THE PC.....     | - 23 -        |
| 5.13 EVALUATION FUNCTION.....                      | - 23 -        |
| 5.14 SMS NOTIFICATION.....                         | - 23 -        |
| 5.15 FIRE ALARM.....                               | - 24 -        |
| 5.16 NATIVE ID.....                                | - 24 -        |
| <b>6. Notes.....</b>                               | <b>- 25 -</b> |
| <b>7. Conference PC Software Introduction.....</b> | <b>- 26 -</b> |
| 7.1 SOFTWARE INSTALLATION.....                     | - 26 -        |
| 7.2 SYSTEM OPERATION.....                          | - 27 -        |

## 1. Product Introduction

The third-generation dual-channel touch-screen microphone features a brand-new solution architecture, as well as a compact design and beautiful appearance. It adopts the dual-port network cable hand-in-hand connection, instead of the traditional six-pin aviation cable, which greatly facilitates the construction and wiring.

## 2. Product Description

### TS-0310/TS-0310A New conference system microphone uni



TS-0310 (Chairman unit)

 
TS-0310A (Delegate unit)

### 2.1 Features

1. Adopt capacitive touch buttons, effectively prevent button knocking noise and ensure a good environment in the venue.
2. Adopt uncompressed audio transmission technology, 48K sampling rate, 80Hz-16KHz bandwidth, perfect sound quality.
3. Adopt 100M network transmission, and hand-in-hand network cable connection, convenient for wiring.
4. Adopt standard TCP/IP communication protocol, support ping packet function.
5. Adopt a 4.3-inch full-color touch screen.
6. Support 63+1 channels of simultaneous interpretation, support dual-channel listening function to simultaneously listen to different interpreter channels.

7. Support PC software microphone control and voice control function.
8. The chairman unit has the priority to turn off the speaking delegate unit.
9. Built-in independent web server, support four language switching, and adjustment of microphone ID number, microphone sensitivity, microphone EQ and other parameters.
10. Support the function of speech countdown and speech timekeeping. The delegate unit can apply to speak.
11. Support the internal feedback suppression function, voice control function, and adjustable sensitivity of the voice control.
12. Support the 5-band EQ adjustment function, adjust sound effects according to the voice characteristics of different speakers to achieve the perfect effect.
13. Support the sign-in function, and functions such as prohibiting unit sign-in and control unit sign-in through PC software.
14. Support voting function, multiple voting modes, and customized content of the options.
15. Support firmware upgrade function on the web page.
16. Support the IP address sniffing function; the ID number, IP address, MAC address and other parameters of the unknown unit can be searched through the PC tool.

## 2.2 Product Interface Introduction

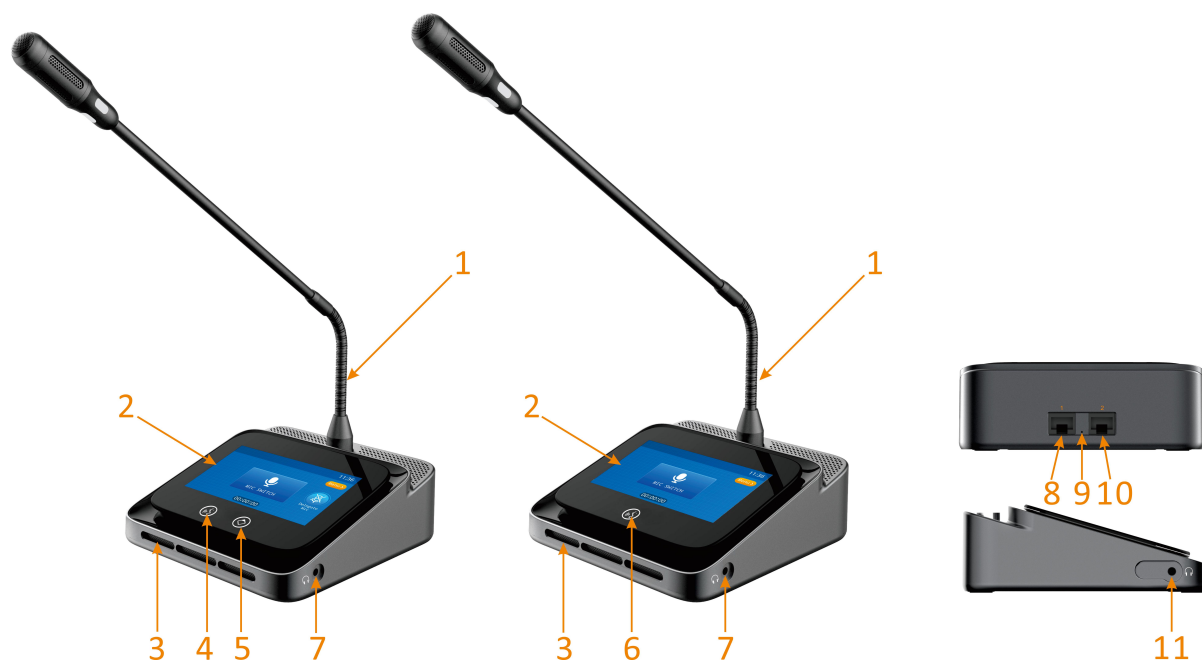


1. Microphone pole;
2. 4.3-inch full color touch screen;
3. Speaker;
4. Chairman microphone button;
5. Chairman microphone priority button;
6. Delegate microphone button;
7. Right earphone port;
8. Network interface 1;
9. Network indicator;
10. Network interface 2;
11. Left earphone port.

## 2.3 Specification
 
| Model                  | TS-0310/TS-0310A   |
|------------------------|--|
| Microphone type        | Electret condenser microphone                            |
| Microphone directivity | Cardioid polar pattern                                   |
| Frequency response     | 80Hz~16KHz   |
| Input impedance        | 1K $\Omega$  |
| Sensitivity            | -36 $\pm$ 1.5dB (0dB=1V/Pa,at 1KHz)                      |
| Max SPL                | 120dB(THD>3%)  |
| SNR                    | >80dB(A)   |
| Crosstalk              | >70dB  |
| Dynamic range          | >80dB  |
| THD                    | <0.1%  |
| Max power consumption  | 3W   |
| Standard               | IEC60914   |
| Power supply           | Conference controller power supply                       |
| Color                  | Fine sand graphite gray                                  |
| Sign-in mode           | Key sign in  |
| Installation mode      | Desktop  |
| Size                   | 140 $\times$ 136 $\times$ 49mm (L $\times$ W $\times$ H) |
| Weight                 | 0.62Kg   |

### 3. Connection Diagram

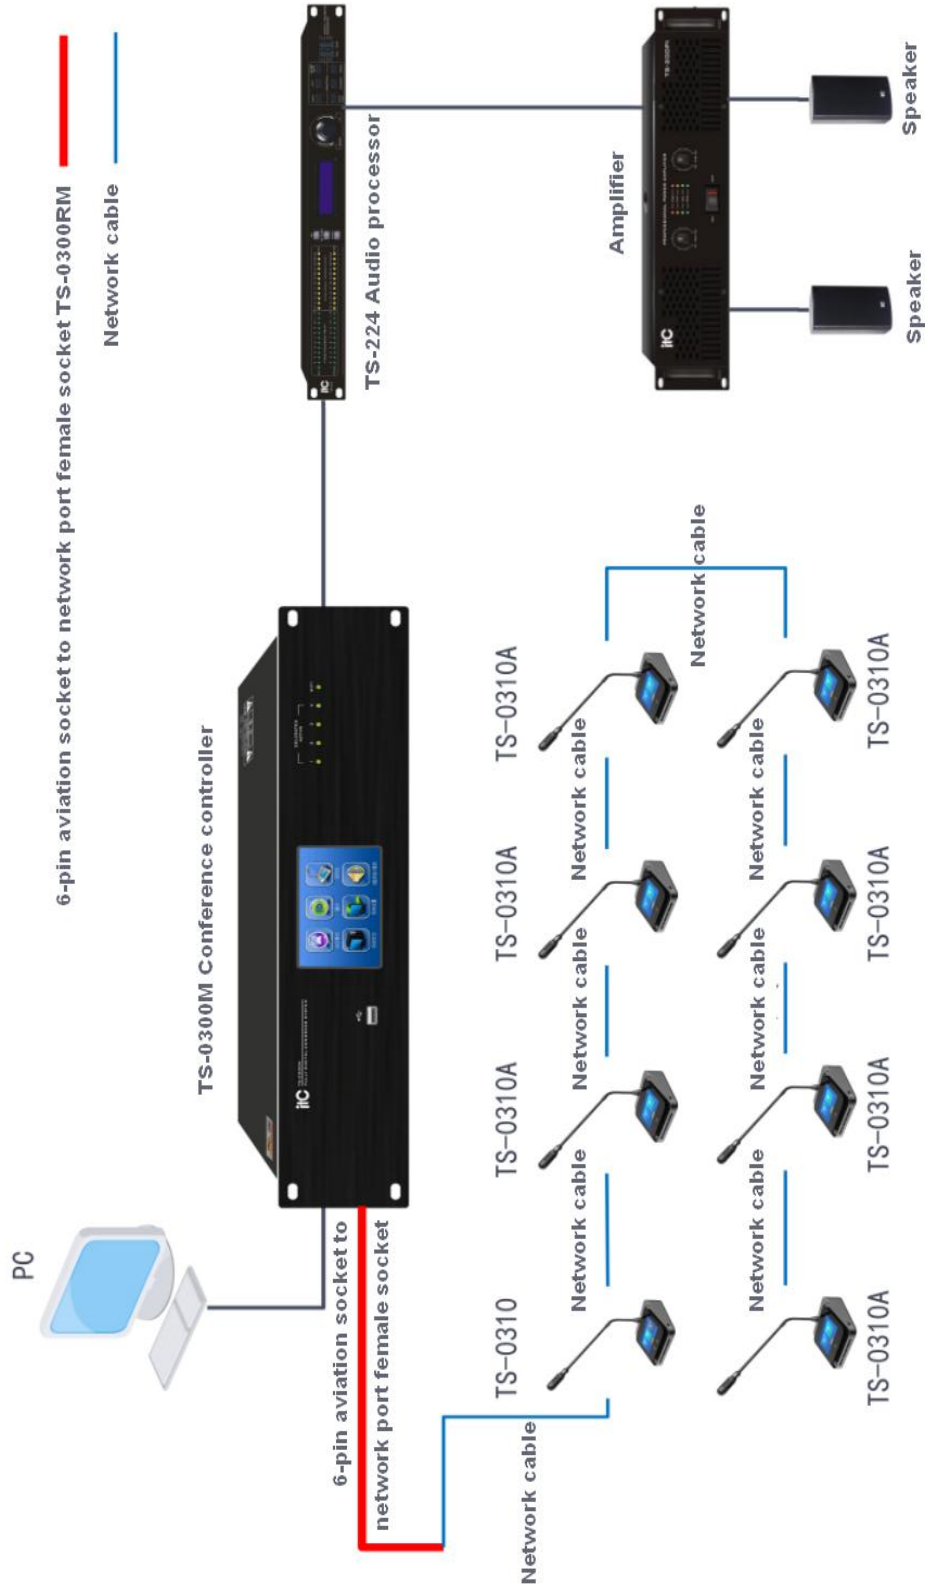

## **4. TS-0310/TS-0310A Operating Instruction**

### **4.1 Startup**

(1) Startup picture: the application version number and kernel version number will be displayed on the startup picture.

### **4.2 Microphone unit type**

(1) The chairman unit has a microphone button and a priority button, which can turn on/off the microphone, perform priority right, initiate sign-in and voting, sign-in, vote, etc.

(2) The delegate unit has a microphone button but no priority button, which can turn on/off the microphone, sign in, etc.

### **4.3 Conference management**

(1) The microphone on/off is controlled by the conference management, and its permissions are configured by the conference controller. Refer to the conference mode description for the logic of use.

(2) Press the priority button of the chairman unit to turn off all delegate microphones, and turn on the microphone of the chairman unit.

### **4.4 Sign in**

(1) Initiate sign-in through PC software. At this time, you can press the microphone button of the unit to sign in, and the result will be displayed on the local screen and the PC software.

(2) The sign-in function of the unit can be disabled or enabled through the PC software.

### **4.5 Vote**

(1) Initiate voting through PC software. At this time, you can press the microphone button of the unit to vote, and the voting result will be displayed on the PC software.

(2) The unit voting function can be disabled or enabled through PC software.

### **4.6 Fire alarm**

When the controller sends out a fire alarm message, the red light on the microphone pole of the unit will flash until the fire alarm is canceled and then the unit resumes its previous state.

## **4.7 Timed speech and speech timekeeping**

This function is controlled by the conference PC software. For details, please refer to the PC user manual. For speech countdown, the PC will issue the time for the timed speech, the unit will count down and display the remaining speech time, and the microphone will be automatically turned off when the time is up. The speech countdown function is only valid for the delegate unit but not the chairman unit. As for speech timekeeping, the PC-designated unit will perform the timekeeping, and the speech time will be displayed on the PC. At the same time, the bottom of the local screen will also display the time of speech countdown and speech timekeeping.

## **4.8 Audio setting and headphone output**

TS-0310/TS-0310A has two left and right earphone channels, which can be used to listen to 63+1 channels. On the audio setting page, you can select the channel number of the left and right channels, and adjust the corresponding volume.

## **4.9 Language setting**

TS-0310/TS-0310A supports four languages switching between Chinese, English, Russian and French.

## **4.10 System setting**

On the system settings page, you can adjust the brightness, view the device type (chairman / delegate), local IP address, device ID number, voting permission, sign-in permission, application version number, and kernel version number.

## **4.11 Request for service**

TS-0310/TS-0310A can initiate three services: tea, paper and pen, and service personnel. The service request is responded to on the PC side.

## **4.12 Short message and electronic nameplate**

The PC can send short messages and electronic nameplate information. After receiving the short message, the device will display the short message in a pop-up window and automatically return to the LOGO page after 30 seconds. The device will display the electronic nameplate information on the top of the display screen after receiving it.

### **4.13 Conference PC software and PC audio adjustment**

Voice control sensitivity setting, voice control off time setting, language switching, sign-in enabling setting, voting enabling setting, microphone sensitivity setting, clock display setting, 5-band EQ display and setting. Please refer to the PC software manual for specific instructions.

### **4.14 Unit ID and related IP address**

(1) According to the current unit ID number, the unit IP address is obtained. The first two bytes of the IP address are fixed at 172.16; the next two bytes will be the high 8 bits and the low 8 bits of the ID number.

(2) For example: if the ID number is 1, the IP address is 172.16.0.1; if the ID number is 100, the IP address is 172.16.0.100; if the ID number is 300, the IP address is 172.16.1.44; if the ID number is 4090, the IP address is 172.16.15.250.

(3) If you forget the ID number, you can find the ID number and IP address of the current microphone through the provided PC View IP Address gadget.

### **4.15 The unit supports ICMP protocol and can perform PING packet related operations**

The PC calls out the CMD and can ping the IP address of the corresponding unit.

### **4.16 Unit web page login**

(1) Set the PC to the same network segment as the unit;

(2) Please refer to the description in 4.14 for the unit IP address;

(3) The subnet mask is 255.255.0.0;

(4) All settings in the web page are effective after "Submit information".

UNIT BASIC SETTING ▼

ID number - 11 +

Voice mode sensitivity - 60 +

Voice mode mute interval - 30 +

Language 中文 **English** Русский Français

Sign Disable **Enable**

Submit Reset

---

UNIT AUDIO SETTING ▼

Mic sensitivity 0dB ▼

Submit Reset

---

UNIT EQUALIZER SETTING ▼

|                |           |        |
|----------------|-----------|--------|
| 80 ~ 175 HZ    | 105 HZ ▼  | 0 dB ▼ |
| 230 ~ 500 HZ   | 385 HZ ▼  | 2 dB ▼ |
| 650 ~ 1400 HZ  | 850 HZ ▼  | 1 dB ▼ |
| 1.8 ~ 4.1 KHZ  | 2400 HZ ▼ | 0 dB ▼ |
| 5.3 ~ 11.7 KHZ | 6900 HZ ▼ | 0 dB ▼ |

Submit Reset

#### 4.17 Unit ID number setting on Web

- (1) Reset the unit ID, and the IP address of the unit will change.
- (2) After setting, you need to log into the web page according to the IP address bound to the new ID to conduct parameter settings.

#### 4.18 Voice control setting on Web

- (1) Set the microphone sensitivity in the voice control mode.
- (2) Set the no-signal off time in the voice control mode (the chairman unit will not be affected).

## 4.19 Language switch setting on Web

(1) The unit supports four languages switching: Chinese, English, Russian and French.

## 4.20 Sign-in setting on Web

(1) This function is required to be set in non-sign-in mode. Generally, it is set before the meeting.

UNIT BASIC SETTING

ID number

Voice mode sensitivity

Voice mode mute interval

Language

Sign

## 4.21 Unit audio parameters setting on Web

(1) Microphone sensitivity;

(2) Microphone EQ.

UNIT AUDIO SETTING

Mic sensitivity

UNIT EQUALIZER SETTING

|                |                                      |                                   |
|----------------|--------------------------------------|-----------------------------------|
| 80 ~ 175 HZ    | <input type="text" value="105 HZ"/>  | <input type="text" value="0 dB"/> |
| 230 ~ 500 HZ   | <input type="text" value="385 HZ"/>  | <input type="text" value="2 dB"/> |
| 650 ~ 1400 HZ  | <input type="text" value="850 HZ"/>  | <input type="text" value="1 dB"/> |
| 1.8 ~ 4.1 KHZ  | <input type="text" value="2400 HZ"/> | <input type="text" value="0 dB"/> |
| 5.3 ~ 11.7 KHZ | <input type="text" value="6900 HZ"/> | <input type="text" value="0 dB"/> |

## 4.22 Unit basic information viewing on Web

 
- (1) Version number;
- (2) MAC address;
- (3) Microphone unit type.

| UNIT BASIC INFORMATION |                   |
|------------------------|-------------------|
| Kernel version         | V1.1.0 H1110BA03  |
| Application version    | V1.4   M0908BAH3  |
| MAC address            | 9C:9C:1F:1E:CC:DF |
| Unit type              | Delegate          |


## 5. TS-0310/TS-0310A Display Operating Instruction

### 5.1 Startup

After the microphone is powered on, the unit screen displays "System is loading...", as well as the kernel software version number and application software version number. The startup picture is as follows:

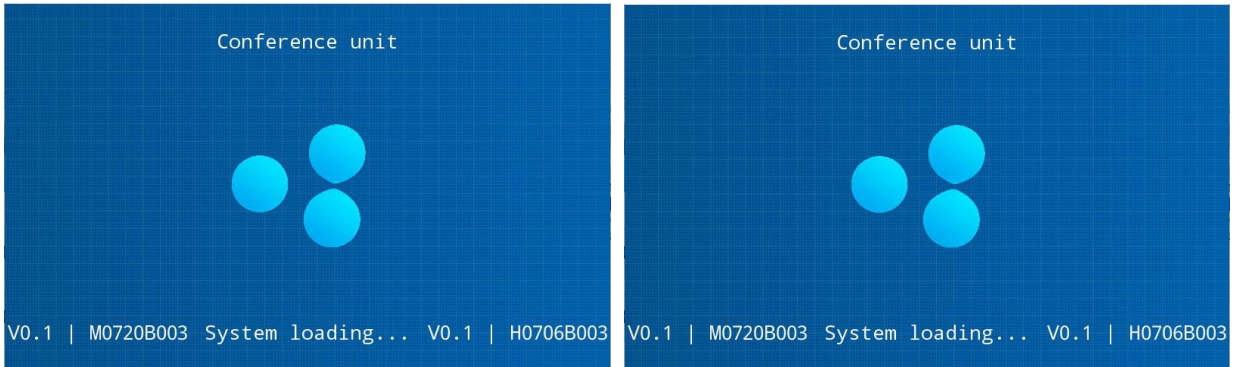

 5.2 After the startup is completed, enter the homepage, and the interface is as follows:

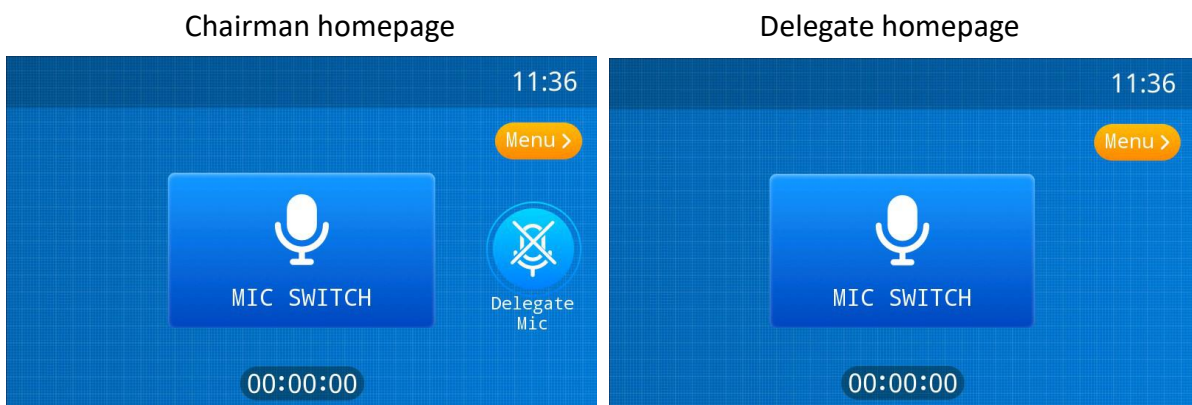


### 5.3 Microphone management

The microphone on/off is controlled by the conference management, and its permissions are configured by the conference controller. Please refer to the conference mode description of the controller for the logic of use.


① Press the MIC power switch to power on/off the microphone, and the unit interface is as follows:




The headset icon is displayed when the headset is plugged in:

 

 ② In APPLY mode, when a delegate unit applies to turn on the microphone, the delegate interface is as follows:

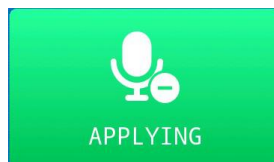

 At this time, the chairman unit displays as follows:

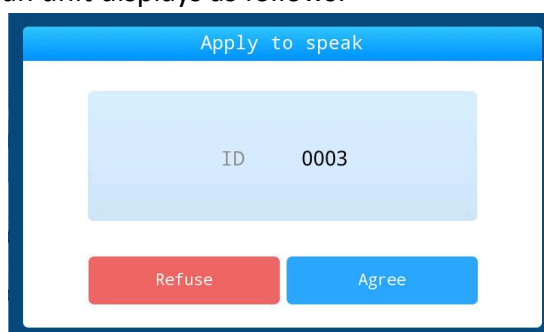


③ When the number of applicants is full, it will be displayed as follows:



④ In NOMAL mode, the delegate units that exceed the allowed number will enter the waiting state. When the number of waiting units is full, it will pop up a corresponding prompt, as shown below:




## 5.4 Menu interface

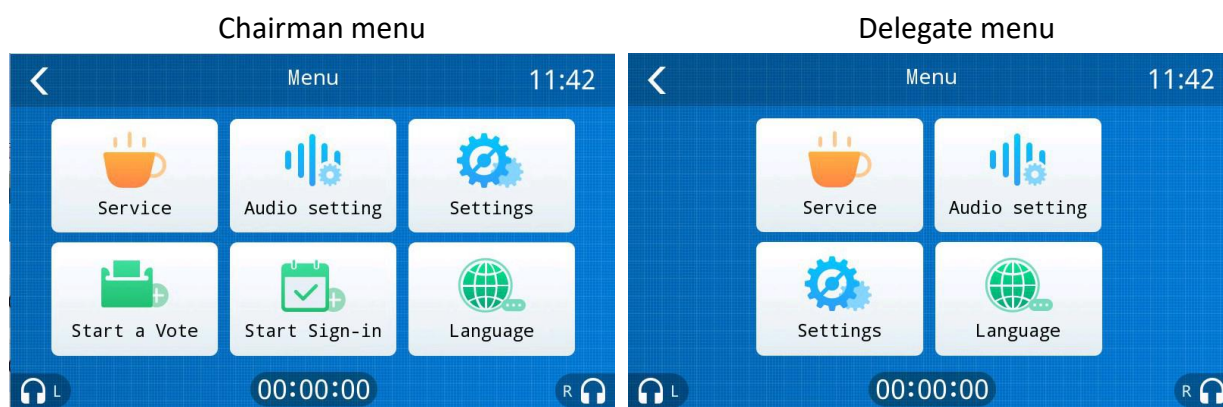 


## 5.5 Service interface

 Click "Tea", "Paper and Pen", "Service personnel" to pop up the corresponding service windows, click Cancel to exit the pop-up window and return to the service interface; click OK to send the corresponding service request to the controller and return to the service interface.

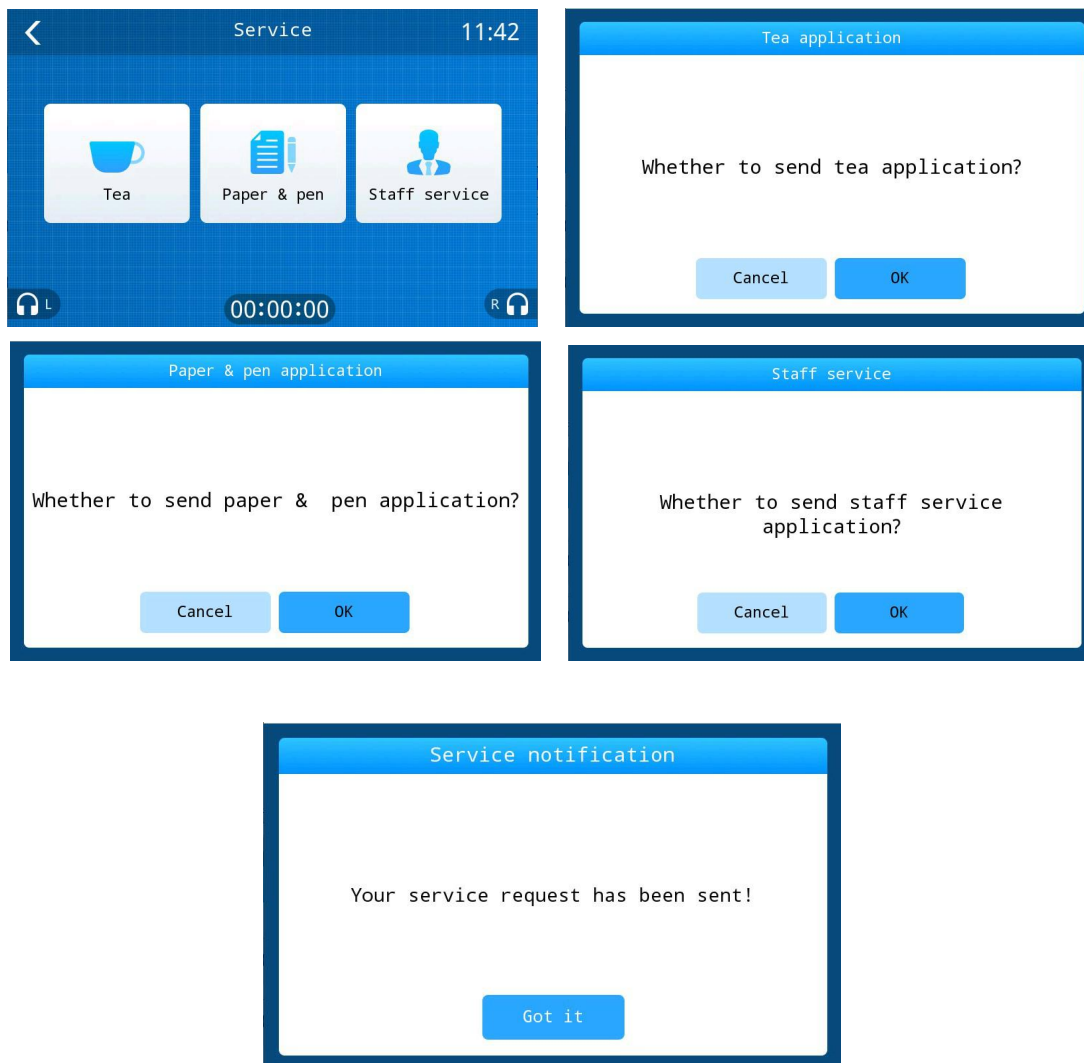


## 5.6 System settings

 Click to enter the system settings interface, you can view the current device type (chairman/delegate), IP address, ID number, voting permission, sign-in permission, application version number, kernel version number and other information. The slide bar below can slide to adjust the brightness of the screen. The speaker and ambient light are off by default and can be turned on when needed.

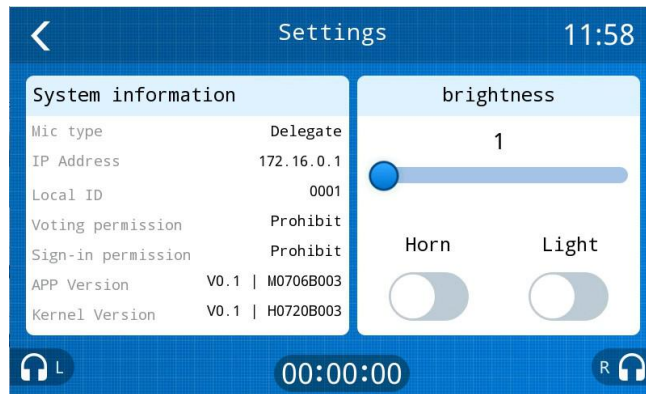


## 5.7 Audio settings

 Click to enter the audio settings interface, you can swipe up and down to switch the simultaneous interpretation channels of the left and right earphones, which ranges from 0 to 63. And you can also adjust the volume of the left and right earphones, ranging from 0 to 16. On the system setting page, the speaker and ambient light are off by default.

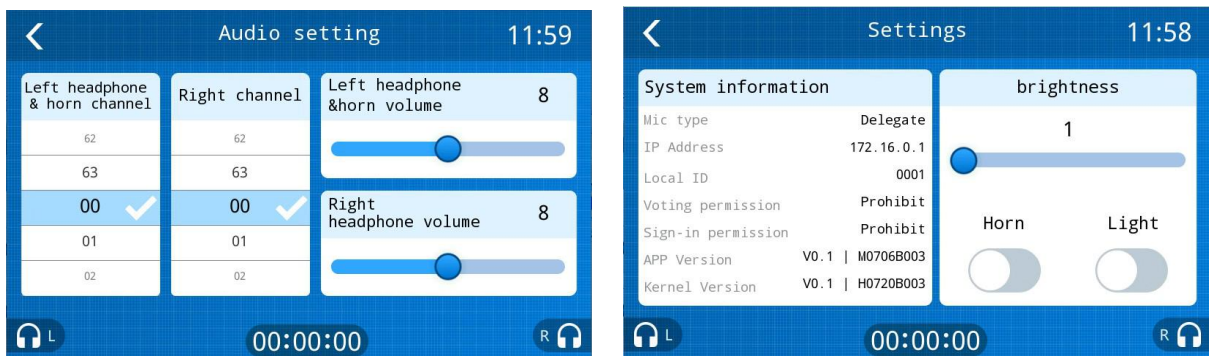


## 5.8 Initiate voting

 
When the voting permission is enabled, click Start voting and all microphones enter the voting mode; click Voting result to display the previous voting result.

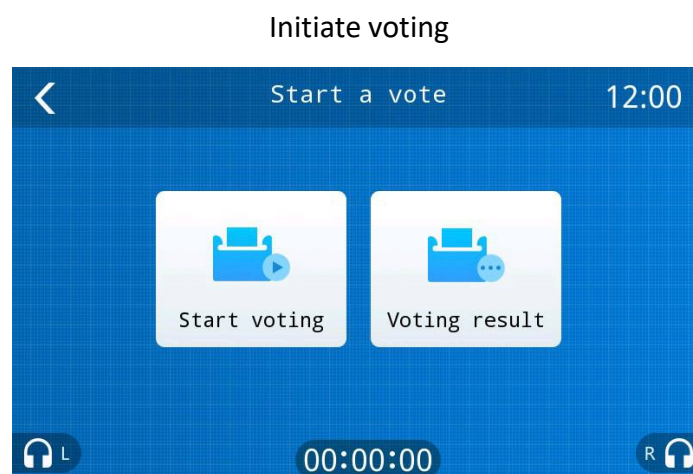


### Chairman voting interface

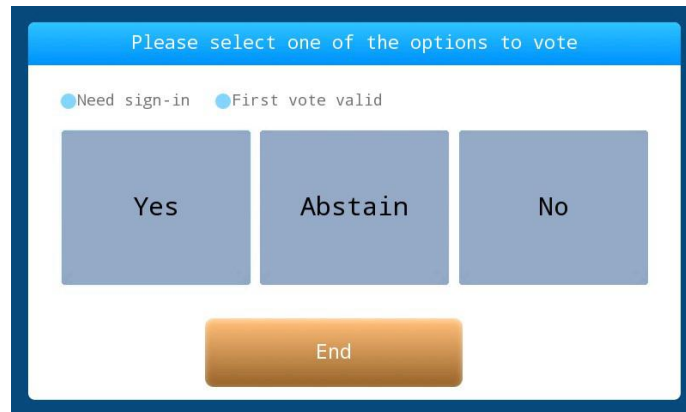 

### Delegate voting interface

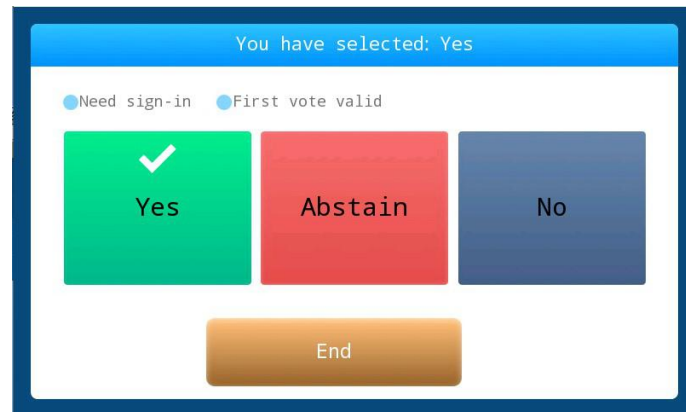 

### Voting result

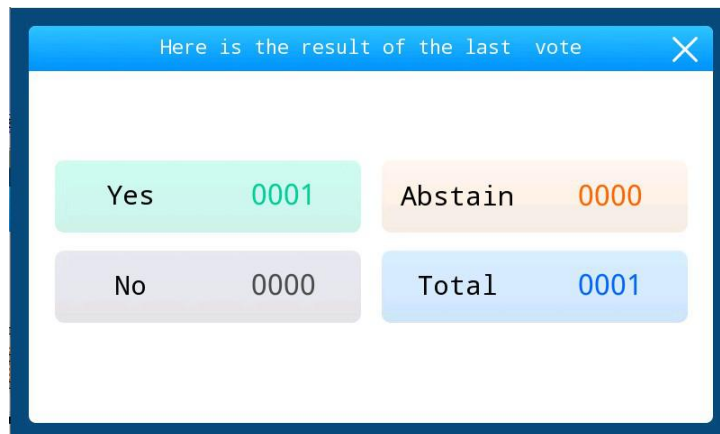


After the voting is completed, the voting result of this time will be updated.




## 5.9 Initiate sign-in

 When the sign-in permission is enabled, the chairman machine clicks Start sign-in and all online microphones enter the sign-in mode.


Initiate sign-in

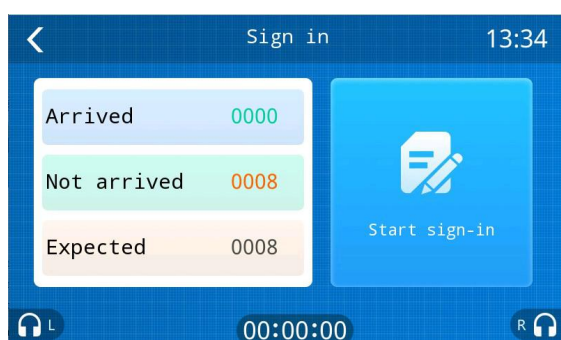

Chairman sign-in

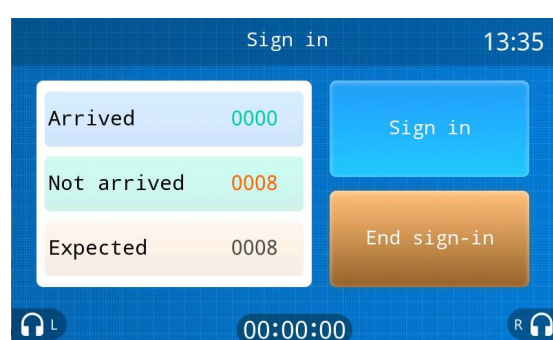 

Delegate sign-in

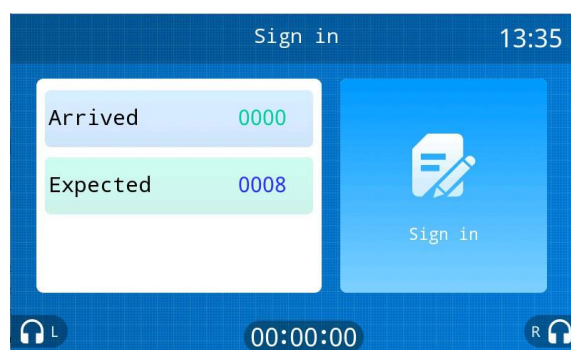 


Click Sign in, and it will prompt that you have signed in successfully. The interface is as follows:



### 5.10 Language settings

 Click Language settings to enter the language switching interface, click the corresponding language button, and it will switch to the corresponding language. It supports four languages switching: Chinese, English, Russian and French.

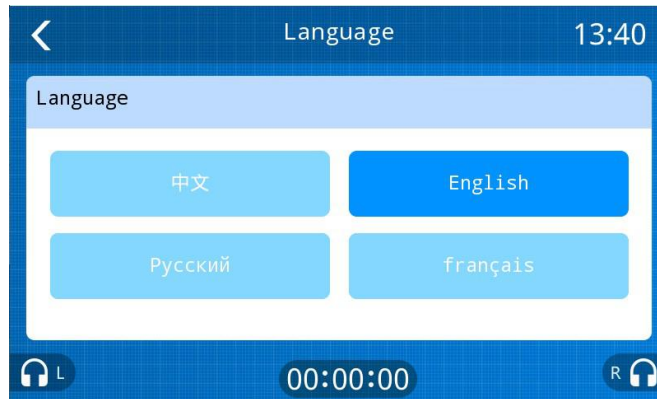


### 5.11 Regular voting initiated by the PC

Select an option, and a check mark will appear behind the option, and the item you have selected will be displayed in the prompt bar above the option.



### 5.12 Five-key ranking initiated by the PC

 Click an option, and a check mark will appear behind the option, and the item you have selected will be displayed in the prompt bar above the option.

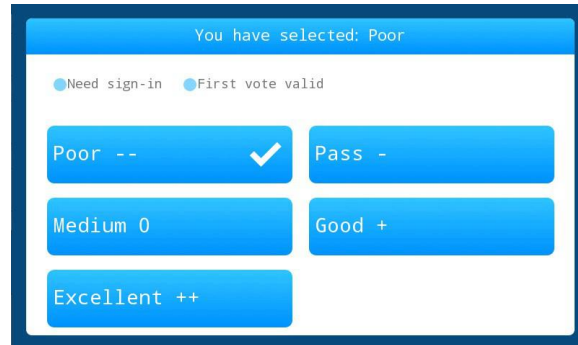



### 5.13 Evaluation function

The evaluation function initiated by the PC.



  
### 5.14 SMS notification

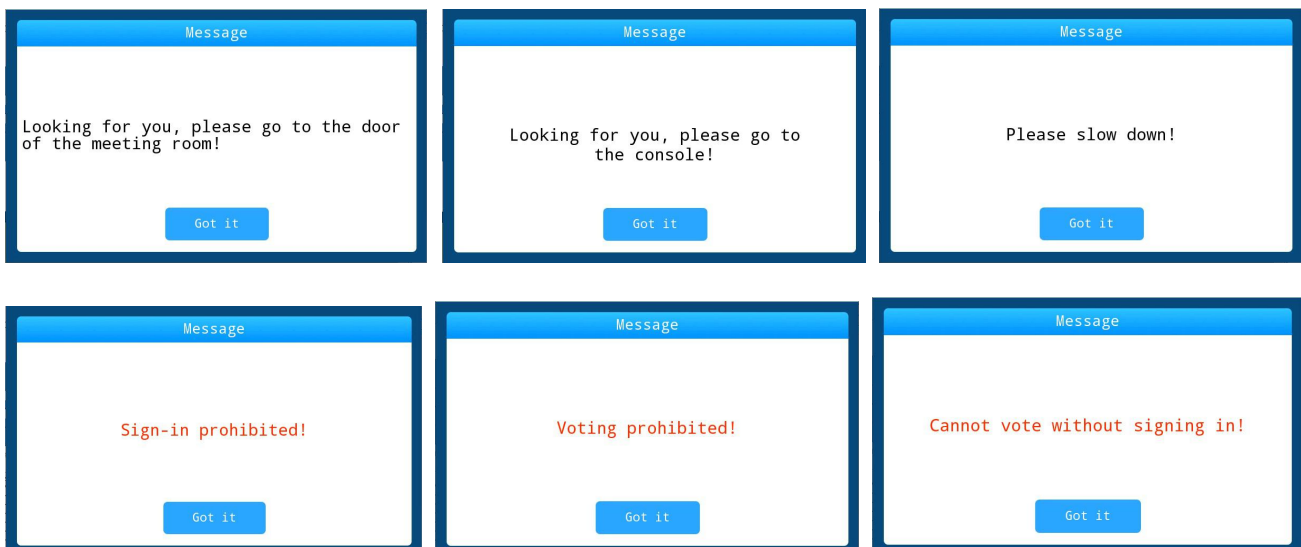

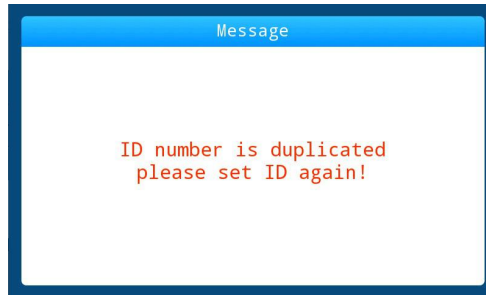


### 5.15 Fire alarm

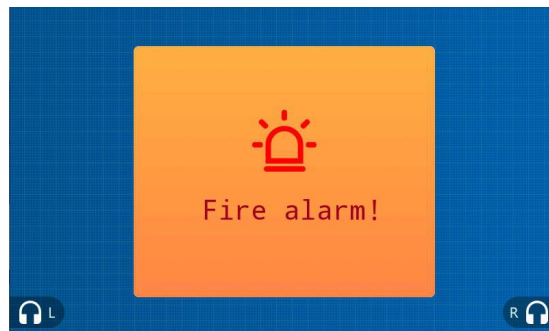 

### 5.16 Native ID

 Click Set to modify the native ID; each time you press Set, the native ID will automatically +1.

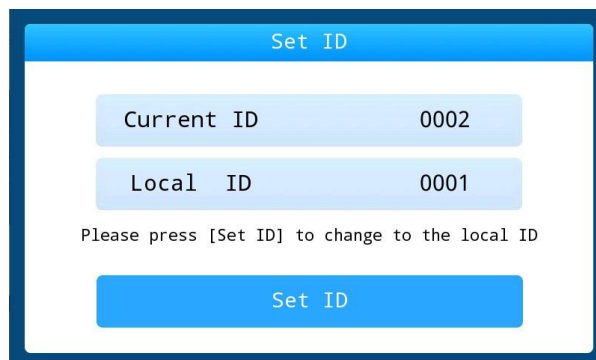

## 6. Notes

Note: When using the unit search scan tool to search for the device IP address and log in to the WEB management interface, pay attention to that the network port of the TS-0310 unit cannot be directly connected to the computer network port, which will cause the computer to burn out.

The network port of the TS-0310 microphone unit does not support POE power supply, and it cannot be connected to a POE switch.

 
### **Disclaimer:**

- 1. You must use the factory-equipped network cable for the connection between the TS-0310/0310A microphones, otherwise all the consequences will be borne by yourself.**
- 2. It is forbidden to connect other devices to the network port, otherwise all consequences will be borne by yourself.**

## 7. Conference PC Software Introduction

### 7.1 Software installation

1. Double click "Digital conference client", and then click "next" and "finish" as prompted.

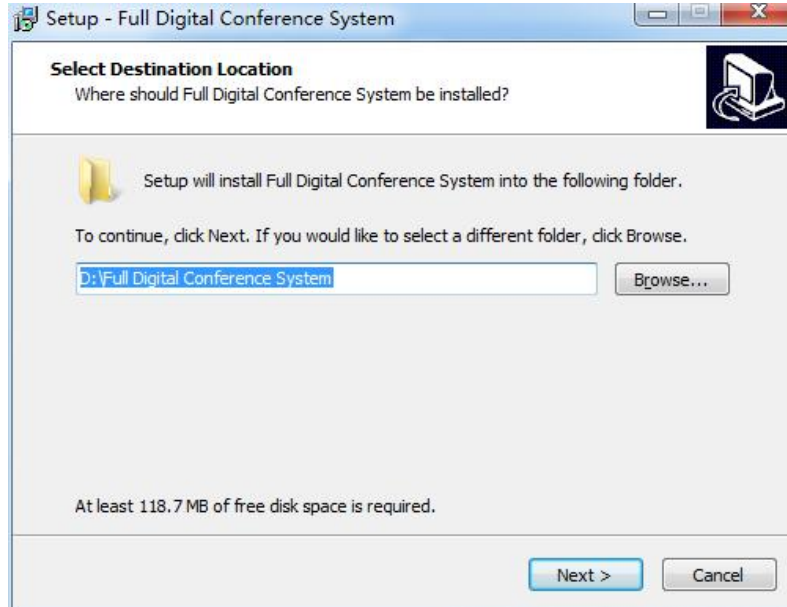


2. Server settings


Before usage, it is required to finish some necessary settings of the fully digital conference system. The main settings are as follows:

① Set the IP address of the computer

 Step 1: right-click [Network Neighborhood], choose [Property] and then open [Local Area Connection]; right-click [Property], as shown in the figure below.

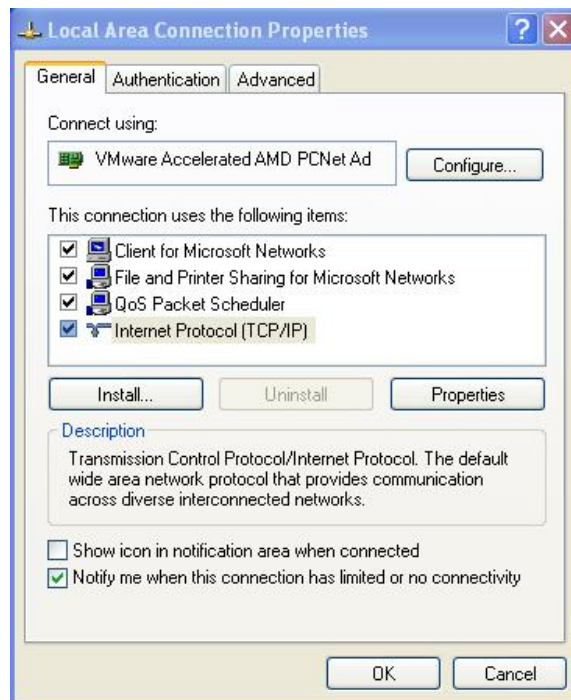

 Step 2: double click **【 Internet protocol (TCP/IP) 】** , and enter the setting interface of the IP address. And then enter the related information of the computer IP according to the controller IP, as shown in the figure below.

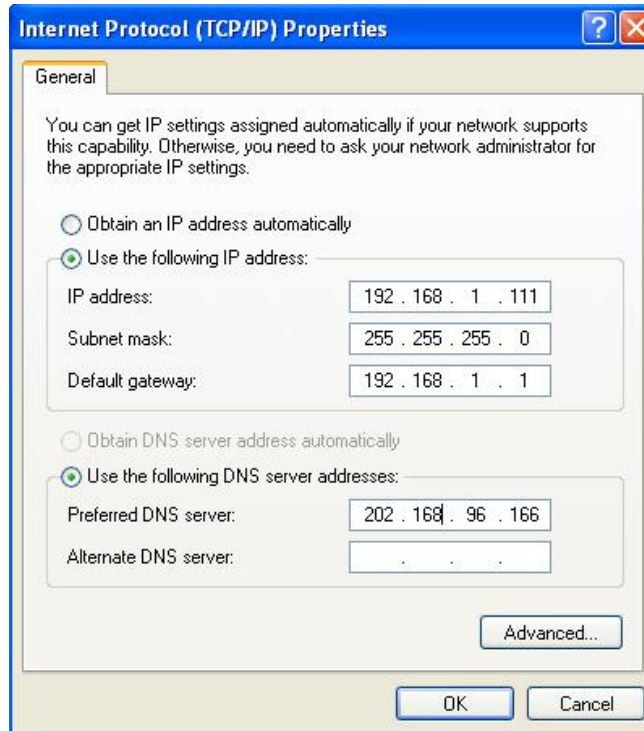

Step 3: modify the IP address. The controller IP is based on the "System Configuration" item of the controller; the IP configuration and the IP network segment can be viewed. You have to make sure that the computer IP and controller IP are in the same network segment. For example: when the current controller IP is 192.168.168.168, the computer IP should be 192.168.168.xxx. As for the subnet mask, it is by default.

## 7.2 System operation

1. After finishing installation, there will be a shortcut icon on the desktop:



 
2. Log in to the software

- 2.1 Double-click the shortcut icon to enter the right picture;


- 2.2 Click the gear-shaped icon in the upper right corner to enter the left picture and set the controller IP; make sure that it is the same as the IP of the conference controller;

- 2.3 Click "Test", it will give a prompt that the connection is successful; click "Back" to enter the right picture again, and enter the account admin and the password admin8888 to log into the software;

2.4 Click “Test”, if it gives a prompt that the connection failed, please check whether the entered IP is the same as the IP of the conference controller and whether the network cable is disconnected.

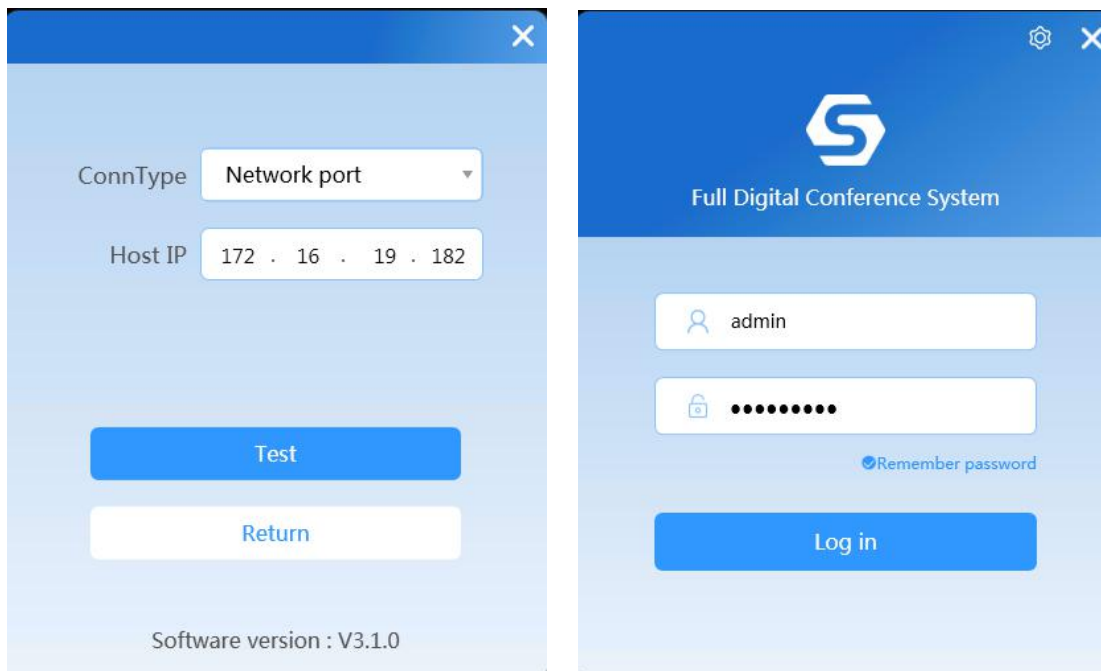

 3. After logging in, enter “conference room layout”, click “Scan online devices”, and then click “Save”.

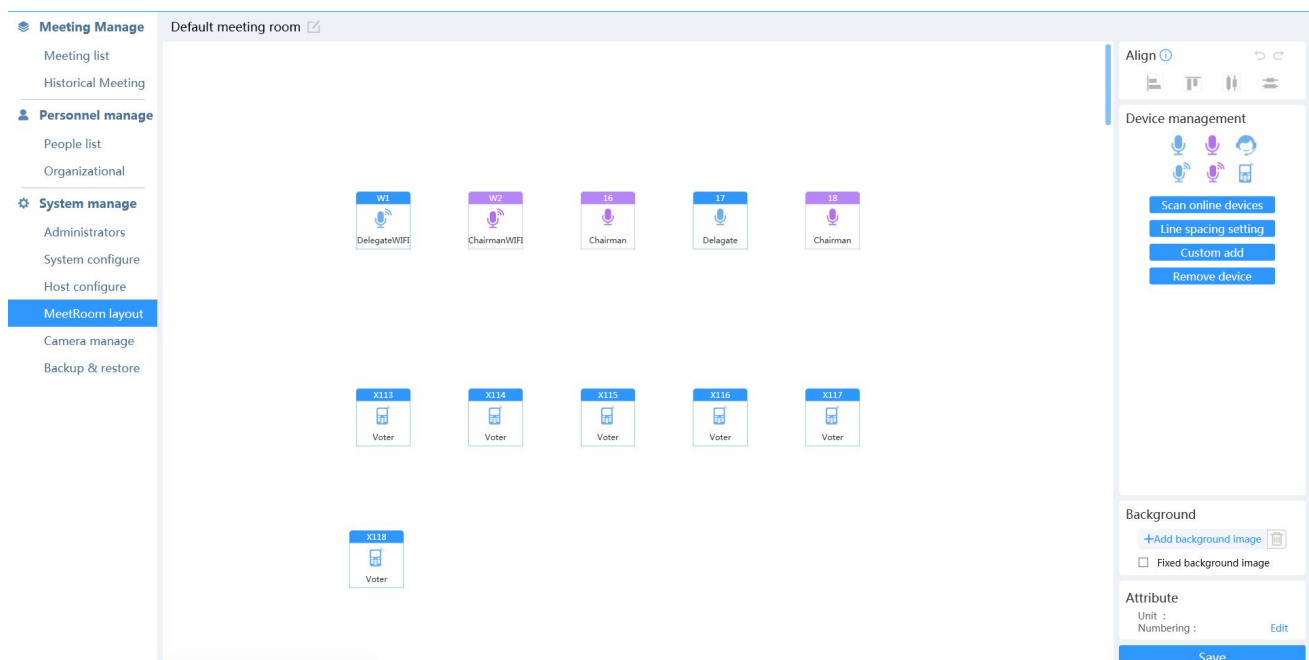

4. Click “Personnel management” to edit the organization structure and participants.

**Meeting Manage**

- Meeting list
- Historical Meeting

**Personnel manage**

- People list**
- Organizational

**System manage**

- Administrators
- System configure
- Host configure
- MeetRoom layout
- Camera manage
- Backup & restore

**People list**

Please enter keywords to search

[Add](#) [Export](#) [Import](#) [Delete](#)

| <input type="checkbox"/> | NO | Name   | Gender | Unit | Department | Position | Phone | Delegation | Group | Partisan | Operate                                     |
|--------------------------|----|--------|--------|------|------------|----------|-------|------------|-------|----------|---|
| <input type="checkbox"/> | 1  | user01 | Male   |      |            |          |       |            |       |          | <a href="#">Edit</a> <a href="#">Delete</a> |
| <input type="checkbox"/> | 2  | user02 | Male   |      |            |          |       |            |       |          | <a href="#">Edit</a> <a href="#">Delete</a> |
| <input type="checkbox"/> | 3  | user03 | Male   |      |            |          |       |            |       |          | <a href="#">Edit</a> <a href="#">Delete</a> |
| <input type="checkbox"/> | 4  | user04 | Male   |      |            |          |       |            |       |          | <a href="#">Edit</a> <a href="#">Delete</a> |

The page displays  items [<](#) [1](#) [>](#) Total 4 record(s) Go to  page [Confirm](#)

**Meeting Manage**

- Meeting list
- Historical Meeting

**Personnel manage**

- People list
- Organizational**

**System manage**

- Administrators
- System configure
- Host configure
- MeetRoom layout
- Camera manage
- Backup & restore

**Organizational**

[Add unit](#)

|                                     | Name                              | Operate  |
|-------------------------------------|-----------------------------------|--|
| <input checked="" type="checkbox"/> | Electronic Information Technology | <a href="#">Add department</a> <a href="#">Edit</a> <a href="#">Delete</a> |
| <input type="checkbox"/>            | Development department            | <a href="#">Add position</a> <a href="#">Edit</a> <a href="#">Delete</a>   |
| <input type="checkbox"/>            | The test of                       | <a href="#">Add position</a> <a href="#">Edit</a> <a href="#">Delete</a>   |

5. Click “conference list” to create a conference.

**Meeting Manage**

- Meeting list**
- Historical Meeting

**Personnel manage**

- People list
- Organizational

**System manage**

- Administrators
- System configure
- Host configure
- MeetRoom layout
- Camera manage
- Backup & restore

**Meeting list**

Please enter keywords to search

[+ Create meeting](#)

| NO | Conference name          | Creator | Conference room      | Start time       | End time         | Status      | Operate   |
|----|--------------------------|---------|----------------------|------------------|------------------|-------------|---|
| 1  | Test meeting 11111—Clone | admin   | Default meeting room | 2020-12-12 00:55 | 2020-12-12 01:55 | In meeting  | <a href="#">Reset</a> <a href="#">End</a> <a href="#">Details</a> |
| 2  | 11                       | admin   | Default meeting room | 2020-12-11 05:37 | 2020-12-11 06:37 | Not started | <a href="#">Start</a> <a href="#">Edit</a> <a href="#">Delete</a> |
| 3  | 111                      | admin   | Default meeting room | 2020-12-11 05:37 | 2020-12-11 06:37 | Not started | <a href="#">Start</a> <a href="#">Edit</a> <a href="#">Delete</a> |

6. For the created conference, you can click “Edit” to create voting and sign-in.

Create vote
✕

Voting name

Voting type Vote Option1: Favor

Voting method Sign in before vote Option2: Waiver

Counting method Valid for the first time Option3: Oppose

Register method Anonymous Option4: /

Display method Bar chart Option5: /

Num Vote count  Sign-in quantity  Voting number

Pass rate Do not use

Count down  Off  On  Second

Meeting setting  Locking  Editable

Projection style [Check](#)

Cancel
Confirm

7. After the conference is created, click “Participant”, select the participants, and then click “simulated seating” to arrange the seats of them. Finally, click “start the conference”.

Digital conference system
▶ Start meeting

Meeting Agenda

**Participants**

7 People Delegates   3 People Staff

**Simulation Rank**

3 People Chairman   1 People Delegate   6 People Voter

**Electronic nameplate&Signin card**

Not set

**Interpreter Language**

Not set

**Camera test**

 
 
Please enter keywords to search

+ Sign in   + Projection   + Vote


**Digital conference system** 🔗

2020-12-11 00:34 Start


|  |               |
|--|---------------|
| 1. Sign in : Delegates 7 People   Staff 3 People | 🔗   👁   🗑   ☰ |
| 2. Projection : projection 1                     | 🔗   👁   🗑   ☰ |
| 3. Projection : projection 2                     | 🔗   👁   🗑   ☰ |
| 4. Vote : vote 1                                 | 🔗   👁   🗑   ☰ |
| 5. Vote : vote 2                                 | 🔗   👁   🗑   ☰ |
| 6. Vote : vote 3                                 | 🔗   👁   🗑   ☰ |
| 7. Vote : vote 4                                 | 🔗   👁   🗑   ☰ |
| 8. Vote : vote 5                                 | 🔗   👁   🗑   ☰ |
| 9. Vote : vote 6                                 | 🔗   👁   🗑   ☰ |

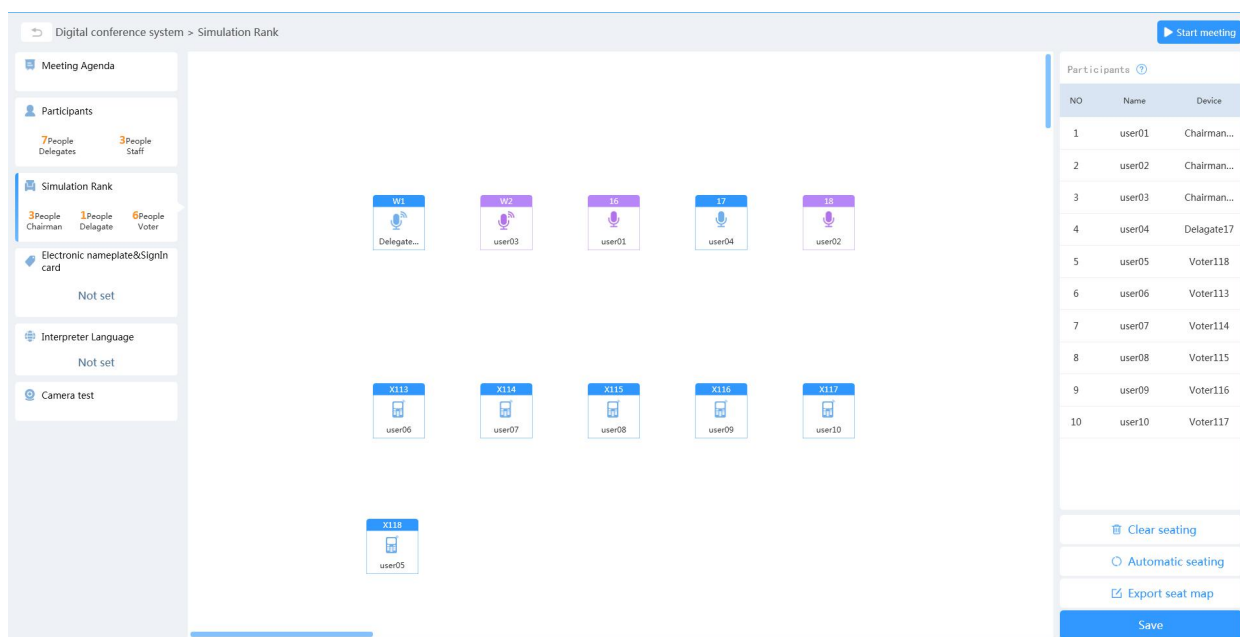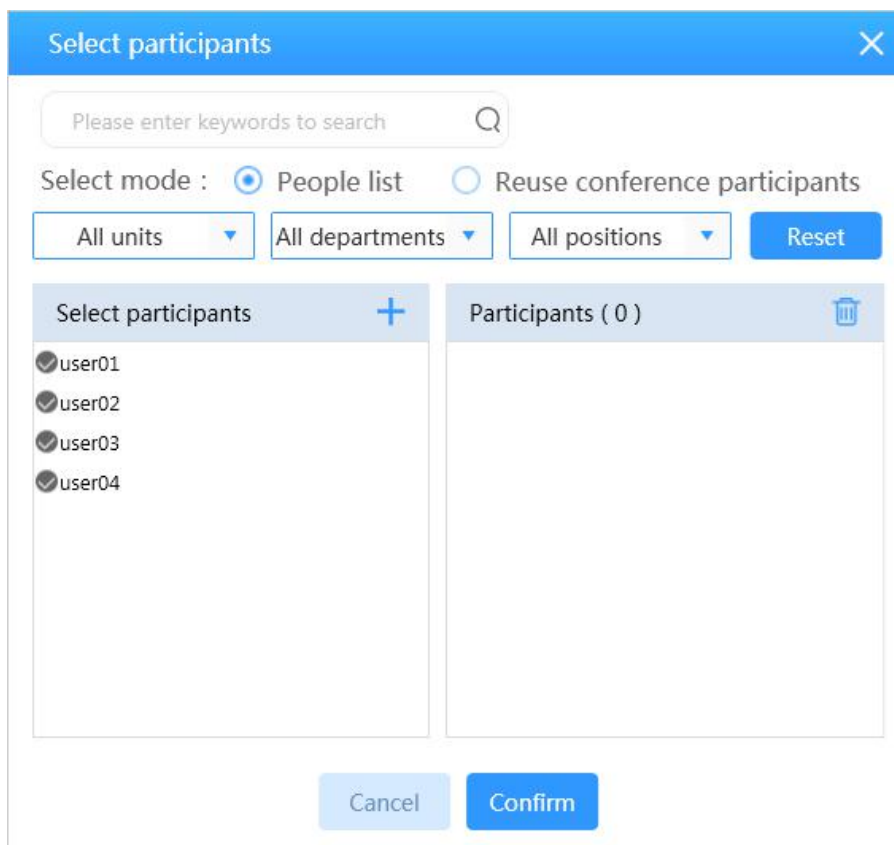

 
8. Click “system configuration”, and you can set the configuration of the system, such as “use the camera”. In this way can it support settings and using of video tracking.

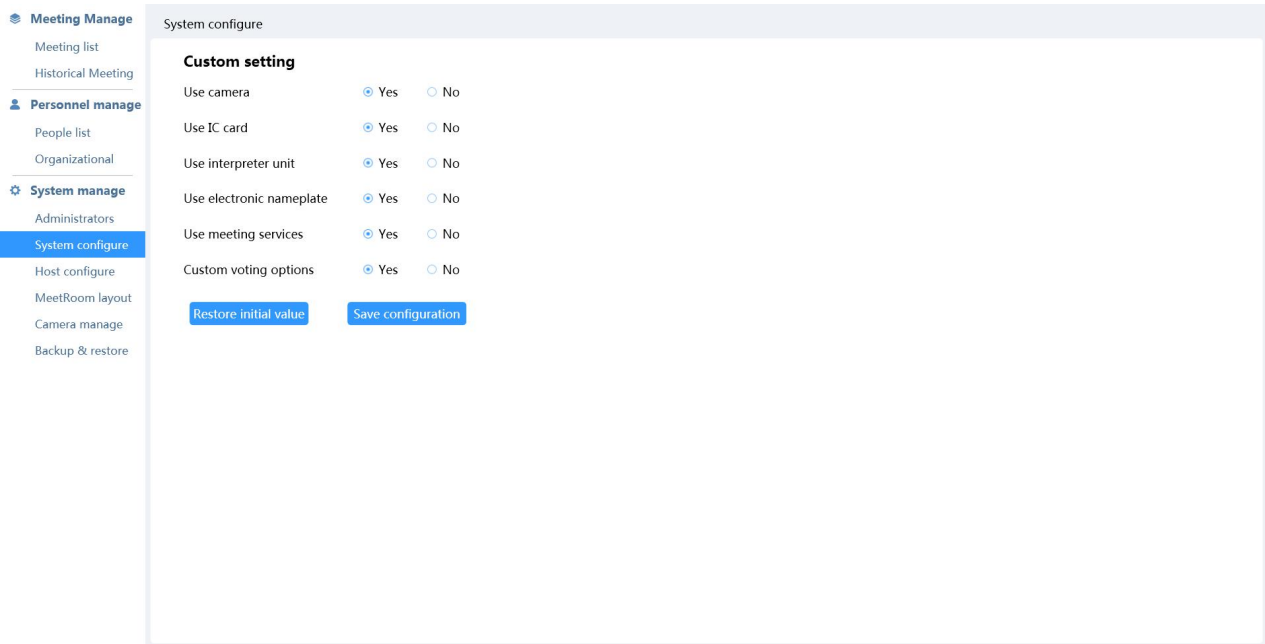

 9. Click “use the camera” in system configuration, and a camera management interface will pop up. And then select different video channels and the preset positions of the corresponding microphones.

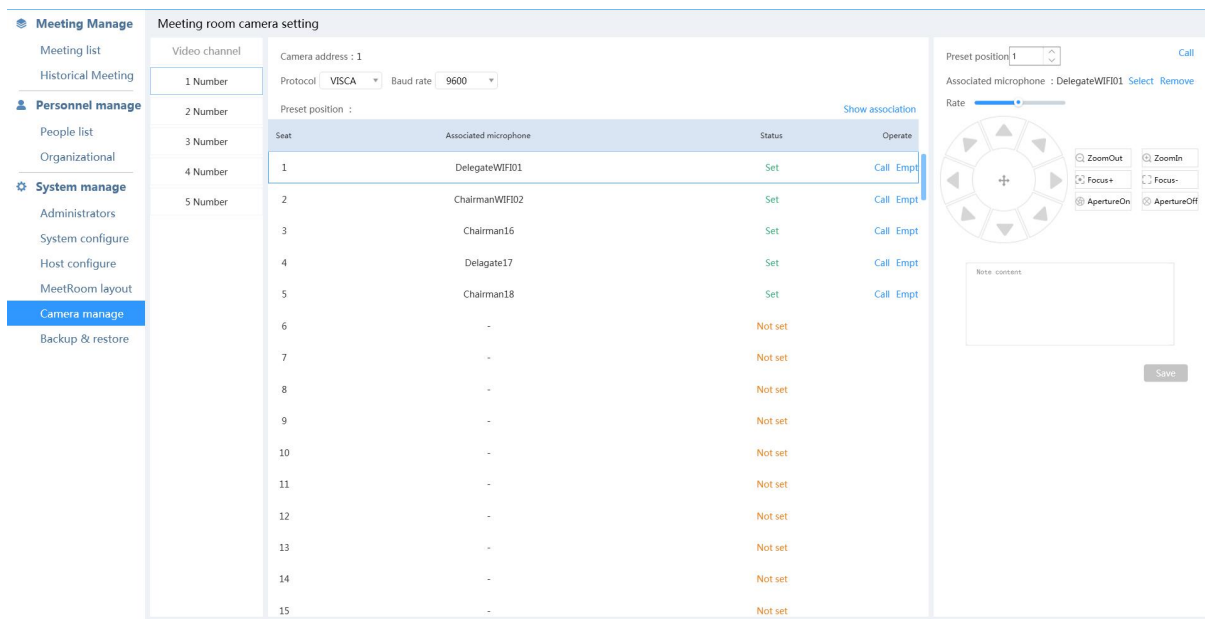

10. After entering the digital conference system software, click the help icon  in the upper right corner to view detailed user manual of the PC software.

# Fully Digital Conference System

